[6] MAINTENANCE CHECK LIST

To maintain long-lasting and safe engine performance, make it a rule to carry out regular inspections by following the table below.

Item	Service Interval								
	Every 50 hrs	Every 100 hrs	Every 200 hrs	Every 400 hrs	Every 500 hrs	Every 800 hrs	Every 1000 hrs	Every one year	Every two years
Checking fuel pipes and clamps	0	484 23					95.6	2	
Changing engine oil *	180	0							
Cleaning air filter element	miai	0							
Cleaning fuel filter		0				1111		SAME.	1.19 (3
Checking fan belt tension and damage		0	7 (6) 11 1 (1) (5) (7)						937-53
Checking water pipes and clamps			0				G.	nought.	THE LE
Changing oil filter cartridge *	14 (23)		0						
Changing fuel filter element	0.8.9.0	20		0				ugsaberi	squa.
Cleaning radiator interior	123,1152	Part desired			0		ergeneral Security des		
Changing radiator cleaner and coolant	31013								0
Changing air filter element			627.22					0	ngny
Checking valve clearance						0		en deserge	0109
Checking nozzle injection pressure		16					0		SPER
Changing water pipes and clamps								la hari	0
Changing fuel pipes and clamps			-				-		0

^{*} Change engine oil and oil filter cartridge at the first 50 hours of operation.



CAUTION

• When changing or inspecting, be sure to level and stop the engine.

NOTE

Change interval of engine oil and oil filter cartridge.

	Oil pan depth				
	101 mm (3.98 in.)	121 mm (4.76 in.)			
Engine oil	50 Hrs (Intial)				
	75 Hrs	100 Hrs			
Oil filter cartridge	150 Hrs	200 Hrs			